

# Installing the MINio in Its Optional Enclosure

## Introduction

The Minio is designed to be mounted in a control compartment or in an optional enclosure outside the control panel (for example, on the wall of a mechanical room).

This document explains how to mount the Minio in its optional enclosure. Refer to Novar Controls *MINio Installation Instructions* (shipped with the module and available in the Documents folder on the Novar Controls Software Library CD) for instructions for mounting the Minio in a control compartment and wiring the Minio.

## Mounting the Minio in Its Optional Enclosure

Use the following procedure to mount the Minio in its optional enclosure.

Step	Procedure
1	Slide the Minio onto the threaded mounting posts.
2	Insert the enclosed nuts onto the posts and tighten to secure the module.



THE CONTENTS OF THIS DOCUMENT ARE SUBJECT TO CHANGE WITHOUT NOTICE.

COPYRIGHT © 2004 BY NOVAR CONTROLS CORPORATION. ALL RIGHTS RESERVED.  
PRINTED IN THE U.S.A.

NOVAR CONTROLS CORPORATION  
6060 ROCKSIDE WOODS BLVD., CLEVELAND, OH 44131  
TEL.: 800.348.1235 WWW.NOVARCONTROLS.COM