

RS-232 Direct-Connect Cable Installation Instructions

Description

Novar Controls Corporation's RS-232 Direct Connect Cable is a universal cable designed to handle local communications between a computer and any Novar Controls executive module (legacy, current, and future models). It is shipped with 9-pin DB adapters on each end (Figure 1), one black and one a neutral color. The neutral-colored adapter can be removed to expose an RJ-11 plug (Figure 2).

NOTE! This universal cable replaces Novar Controls Part No. 600540000.

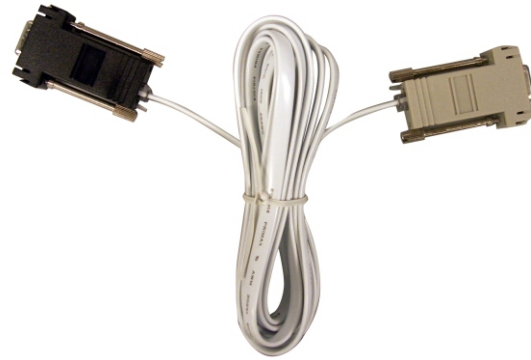


Figure 1. RS-232 Direct-Connect Cable with 9-pin DB adapters



Figure 2. RS-232 Direct-Connect Cable with 9-pin DB adapter and RJ-11 plug

RS-232 Direct-Connect Cable Installation Instructions

Installation

The following procedure should be used to connect a direct-connect cable to a PC and an executive module.

CAUTION! The direct-connect cable must be plugged into the RS-232 connector on the executive module or its baseplate. Caution must be used to ensure that it is not connected to the phone line.

Step	Procedure
1	Plug the black 9-pin DB adapter into the RS-232 connector on a computer and tighten the screws on each side of the adapter to secure the connection.
2	Locate the RS-232 connector on the executive module (or, in the case of RCs, on the baseplate) and determine the type of connector required. <ul style="list-style-type: none">■ If the RS-232 connection is a 9-pin DB connection, use the neutral-colored adapter that comes with the cable.■ If the RS-232 connection calls for an RJ-11 plug, remove the neutral-colored adapter from the cable to expose the RJ-11 plug.
3	Plug the cable into the executive module's RS-232 connector.

Model and Part Numbers

The part number provided in Table 1 should be used to order the appropriate Novar Controls part.

PRODUCT	MODEL NO.	PART NO.
RS-232 Direct-Connect Cable Kit	—	600540010



THE CONTENTS OF THIS DOCUMENT ARE SUBJECT TO CHANGE WITHOUT NOTICE.
COPYRIGHT © 2005 BY NOVAR CONTROLS CORPORATION. ALL RIGHTS RESERVED.
PRINTED IN THE U.S.A.

NOVAR CONTROLS CORPORATION
6060 ROCKSIDE WOODS BLVD., CLEVELAND, OH 44131
TEL.: 800.348.1235 WWW.NOVARCONTROLS.COM